


CMUIC - COMPACT DIAPHRAGM VALVE

Compact diaphragm valve with female union ends for solvent welding

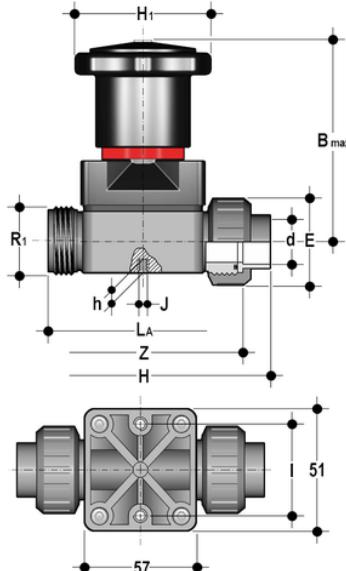

EPDM

Objednací číslo	Materiál	Kategorie	Série	d	DN	PN	product.detail.attribute.B max	E	H	H (5:1)	product.detail.attribute.h	product.detail.attribute.l
CMUIC020E	PVC-C system	Armatury	CM DN 12÷15	20	15	6	86	41	129,5	58,5	8	35

FKM

Objednací číslo	Materiál	Kategorie	Série	d	DN	PN	product.detail.attribute.B max	E	H	H (5:1)	product.detail.attribute.h	product.detail.attribute.l
CMUIC020F	PVC-C system	Armatury	CM DN 12÷15	20	15	6	86	41	129,5	58,5	8	35

PTFE

Objednací číslo	Materiál	Kategorie	Série	d	DN	PN	product.detail.attribute.B max	E	H	H (5:1)	product.detail.attribute.h	product.detail.attribute.l
CMUIC020P	PVC-C system	Armatury	CM DN 12÷15	20	15	6	86	41	129,5	58,5	8	35

CMUIC - COMPACT DIAPHRAGM VALVE

- Handwheel in PA-GR, completely sealed, high mechanical strength with ergonomic grip for optimum manageability
- Integrated adjustable torque limiter designed to prevent excessive compression of the diaphragm and always guarantee a minimum fluid flow
- Optical position indicator supplied as standard
- Bonnet in PA-GR with STAINLESS steel nuts fully protected by plastic plugs to eliminate zones where impurities may accumulate.
Internal circular and symmetrical diaphragm sealing area
- STAINLESS steel bolts, can also be inserted from above
- Threaded metal inserts for anchoring the valve
- Connection system for solvent weld and threaded joints
- Extremely compact construction
- Internal operating components in metal totally isolated from the conveyed fluid
- Valve stem in STAINLESS steel
- Compressor with floating diaphragm support
- Easy to replace diaphragm seal
- Corrosion-proof internal components
- CDSA (Circular Diaphragm Sealing Angle) system offering the following advantages:
 - uniform distribution of shutter pressure on the diaphragm seal
 - reduction in the tightening torque of the crews fixing the actuator to the valve body
 - reduced mechanical stress on all valve components (actuator, body and diaphragm)
 - easy to clean valve interior
 - low risk of the accumulation of eposits, contamination or damage to the diaphragm due to crystallisation
 - operating torque reduction